





# How to connect your Expressionist™ Ultra (MX6021) to your television set.

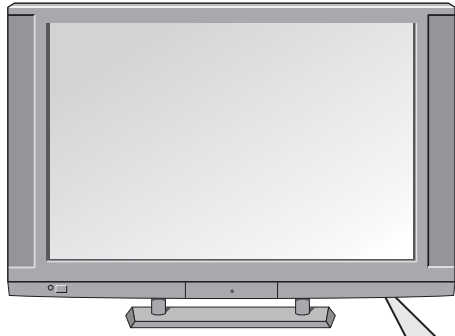

## Step 1:



Locate the white and red audio out connectors on the back of your television.

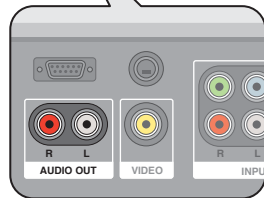

## Step 2:


Connect a RCA to RCA audio cable (not provided) to the back of the television and the other end to the supplied RCA to 3.5 mm adapter.

Note: Be sure to purchase a RCA to RCA cable long enough to provide optimum placement of the MX6021 speaker system.

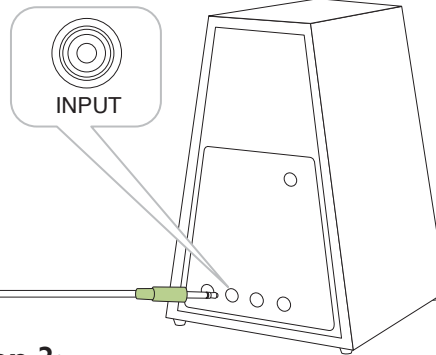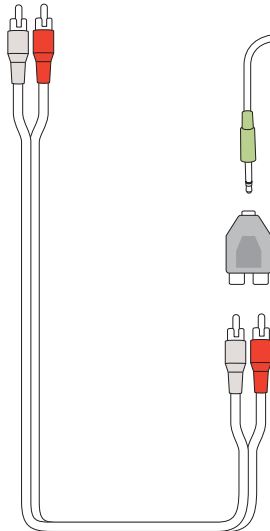

## Step 3:

Plug the supplied auxiliary audio cable (3.5 mm – 3.5 mm) into the RCA to 3.5 mm adapter and the other end into the main input, located on the rear of the MX6021 subwoofer.

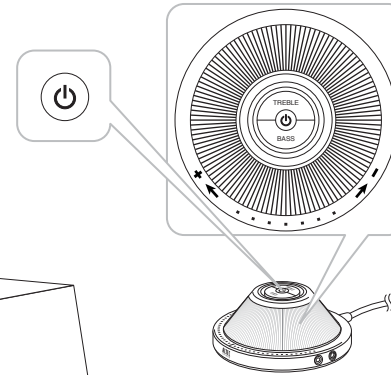


## Step 4:

Turn power on for the MX6021 and adjust the MX6021 volume control to the mid-volume level as indicated by the level +/- LED.

Note: This may vary depending on TV and TV output. Too high of a volume setting on the MX6021 can create distortion when TV is at high volume levels. If this happens reduce the volume level setting on the MX6021.

## Step 5:

Adjust the TV volume to the desired output using your television remote. This will change the MX6021 speaker output as well.

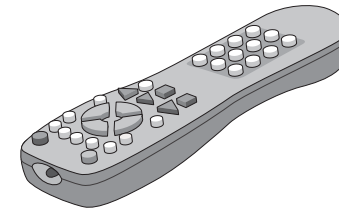

**Enjoy the powerful sound of the MX6021 speaker system!**