



Moondance Glow M402 / M402SR Reset and FM Region Selection Procedures

<i>ACTION</i>	<i>LCD DISPLAY</i>
<i>Turn on the product</i>	<i>Time and Date</i>
<i>Touch and hold the "Power" button and the "Source" button at the same time for a few seconds*</i>	<i>Select FM Band USA</i>
<i>Touch the "Track Forward" or "Track Back" buttons to cycle through the FM Regions</i>	<i>Select FM Band USA, Europe, Japan Wide, Japan</i>
<i>Press and release the "Clock" button on the back of the unit to save the FM Region setting</i>	<i>The unit will power down then power back on and display the time and date</i>

inMotion Max iMT702 Reset and FM Region Selection Procedures

<i>ACTION</i>	<i>LCD DISPLAY</i>
<i>Turn on the product</i>	<i>iMT702...iPod</i>
<i>Touch and hold the "Power" button and the "Track Back" button at the same time for a few seconds*</i>	<i>Reset ?</i>
<i>Touch the "Power" button again</i>	<i>"Wait" then "Reset OK, then REGION=1</i>
<i>Touch the Volume + or Volume - buttons to cycle through the FM Regions</i>	<i>REGION=1, REGION=2, REGION=3, REGION=4</i>
<i>Touch the "Power" button to save your selection</i>	<i>SAVED</i>

****If touching and holding the "Power" and Track Back" buttons do not put the iMT702 into reset mode, then touch and hold the "Power" and "Track Back" buttons at the same time for a few second then follow the rest of the procedures above.***

Note Region=1 for USA, Region=2 for Europe, Region=3 for Japan Wide, Region=4 for Japan